

NAUTIZ X6

QUICK START GUIDE




handheld


① WHAT'S IN THE BOX

The pictures shown below may differ from the actual products.


To purchase additional or optional products, contact our customer center.

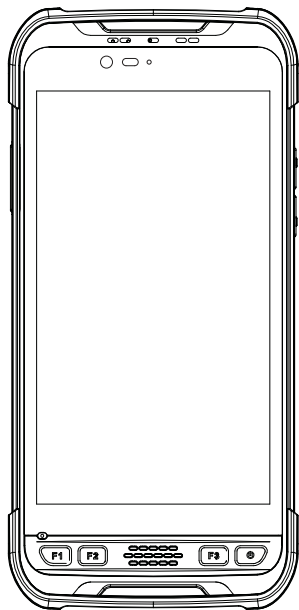


Nautiz X6 Main body

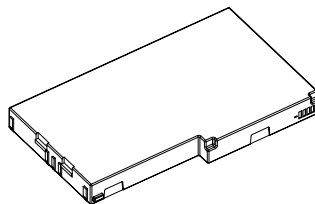


Standard battery

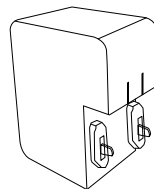

Charging adaptor

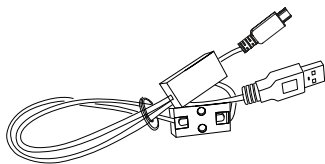


Type-C cable

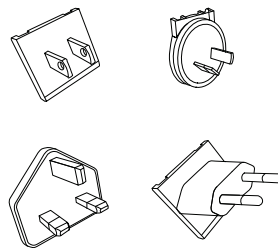


Converter plugs

② YOUR NAUTIZ X6

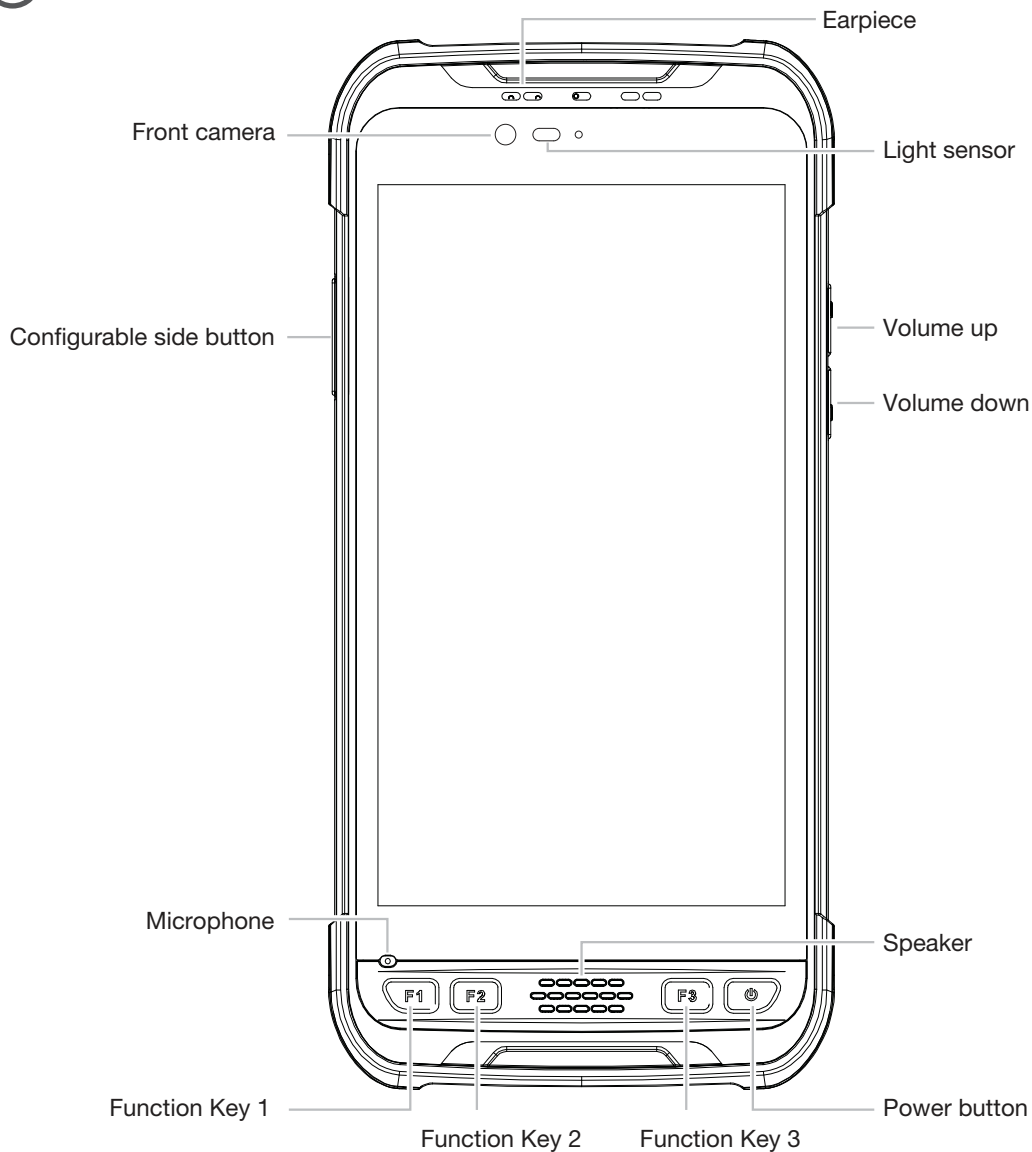


③ YOUR NAUTIZ X6

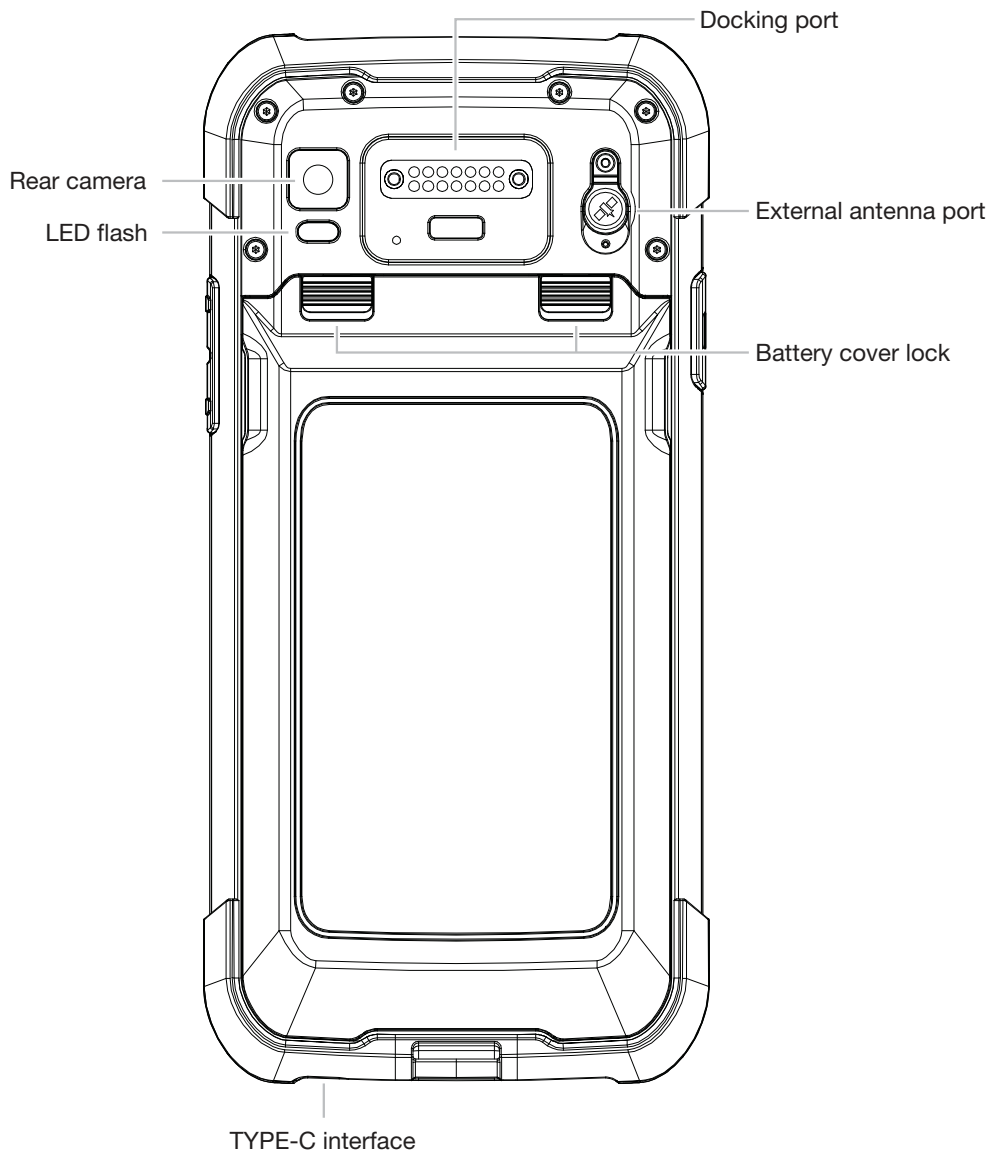

④ SIM/MICRO SD CARD




This is how you insert and remove the SIM/micro SD.

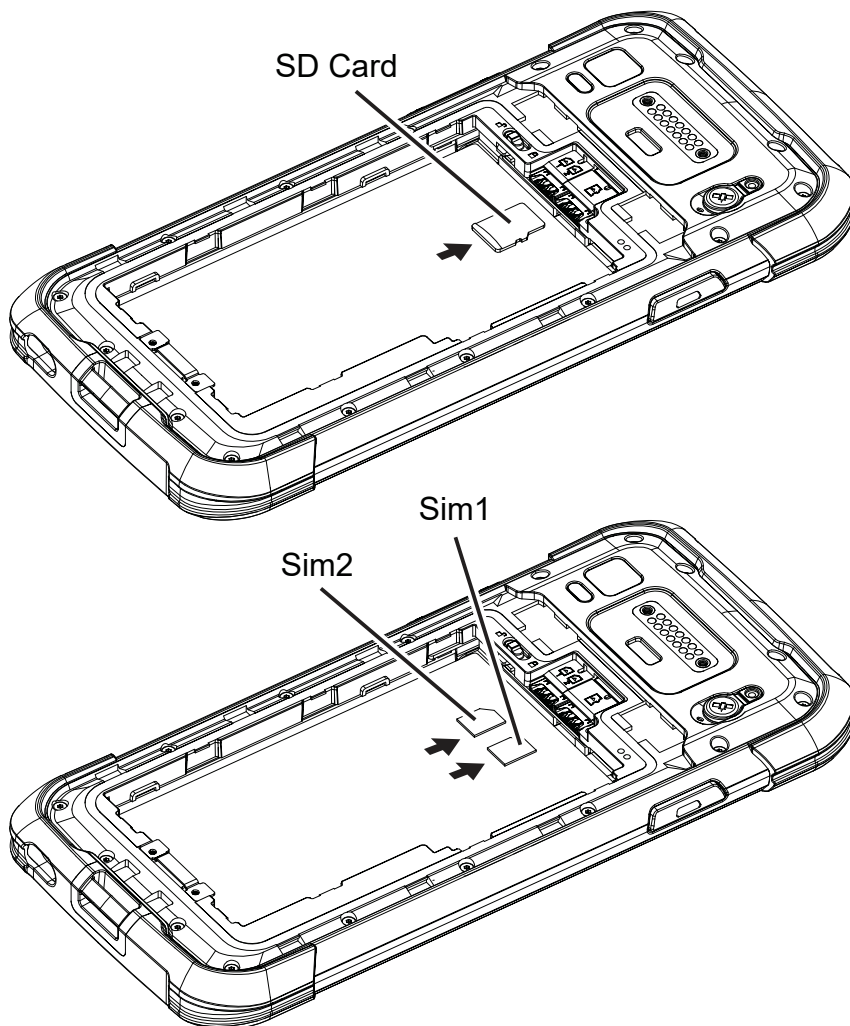

⑤ INSERT BATTERY

To insert the battery


1. Insert the battery
2. Push the battery lock to the close position
3. Attach the battery cover

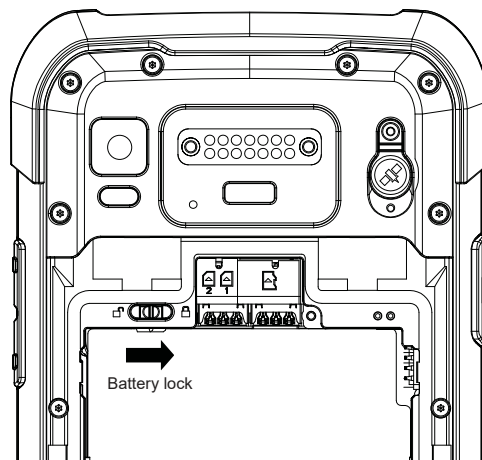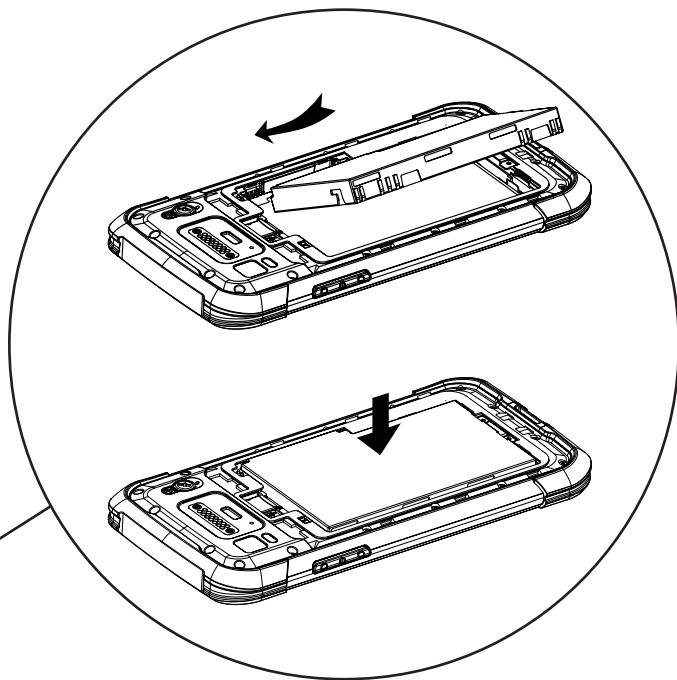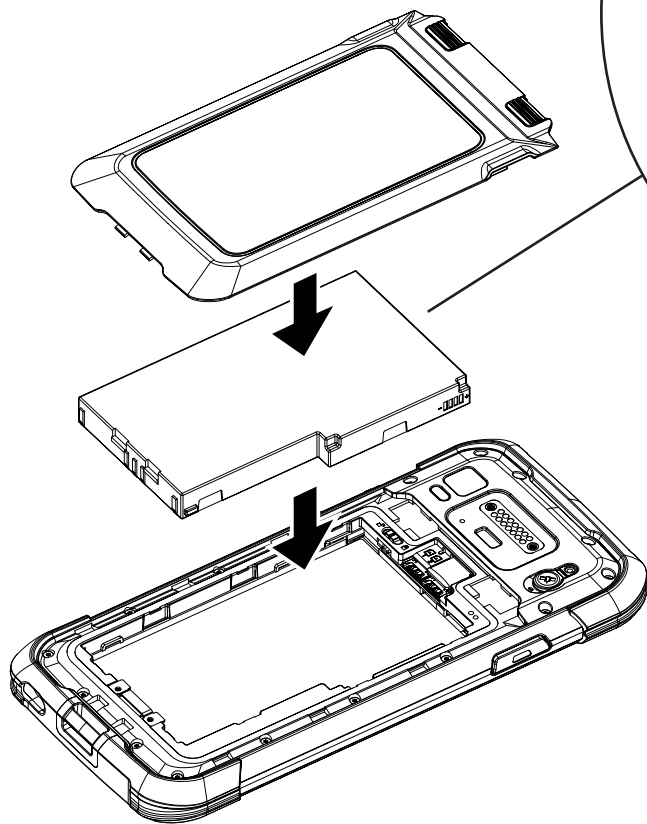

⑥ INSERT BATTERY

To insert the battery



4. Push the battery cover lock to the close position

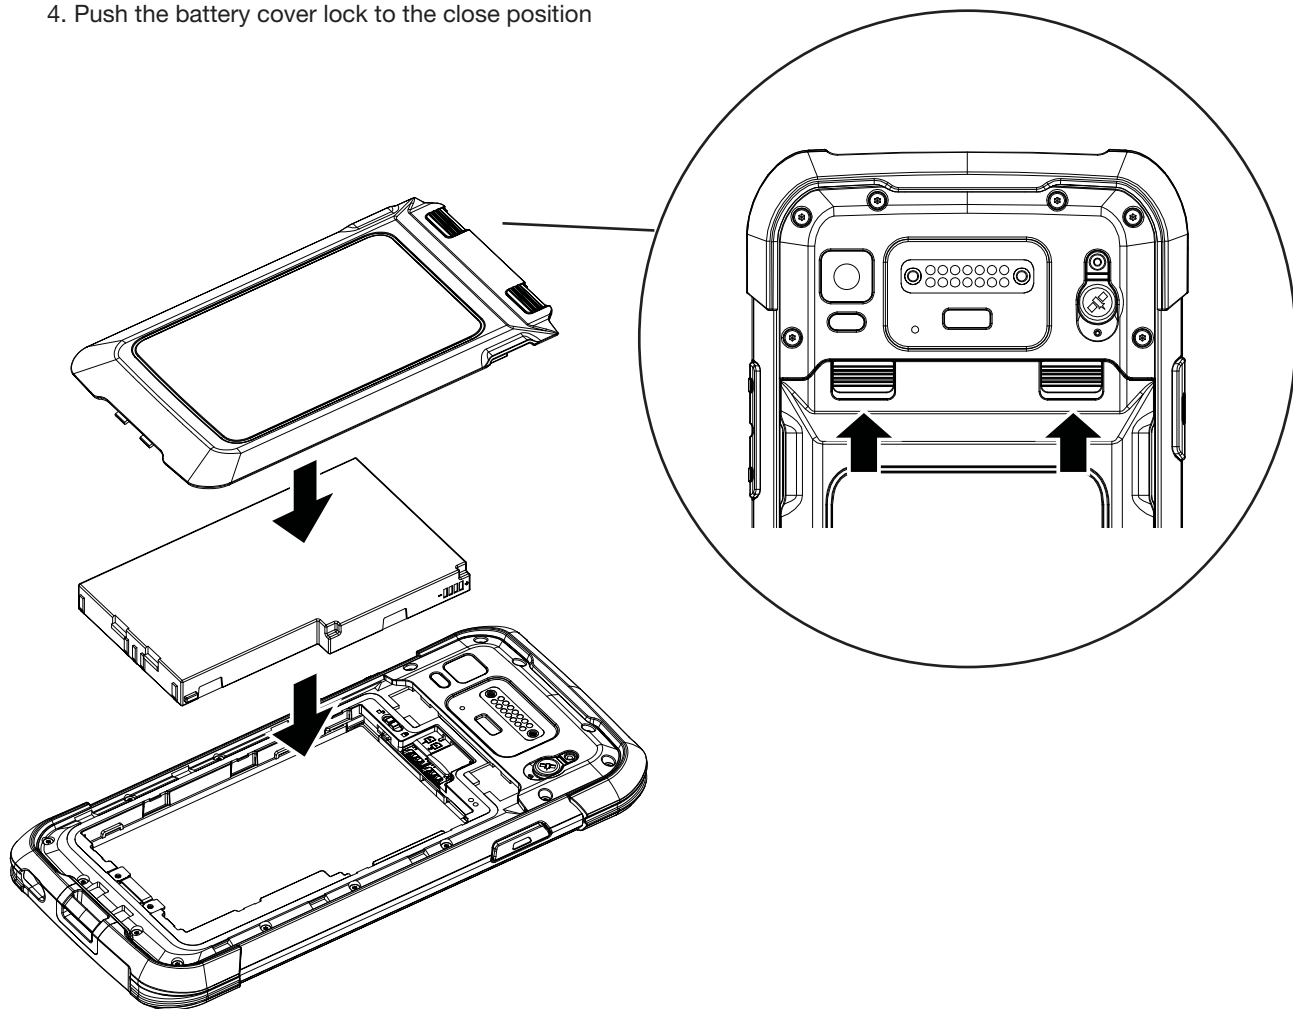

⑦ REMOVE BATTERY

To remove the battery




1. Power off the device before removing the battery
2. Push the battery cover lock to the open position

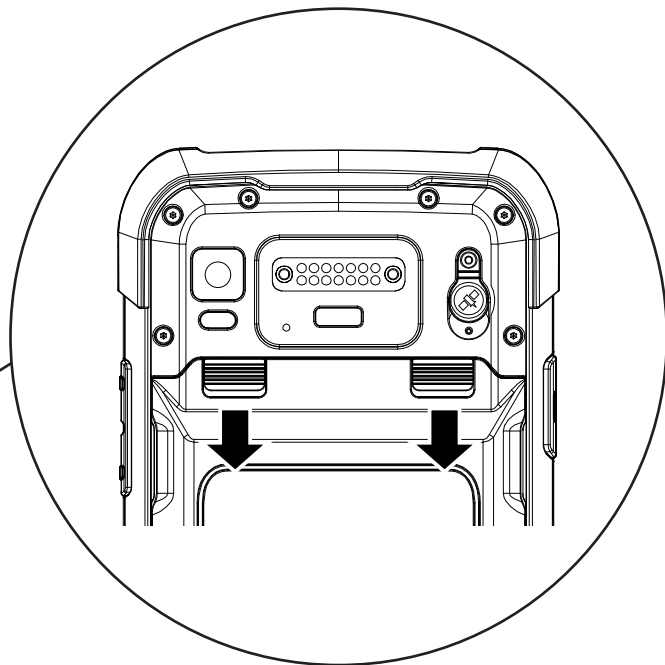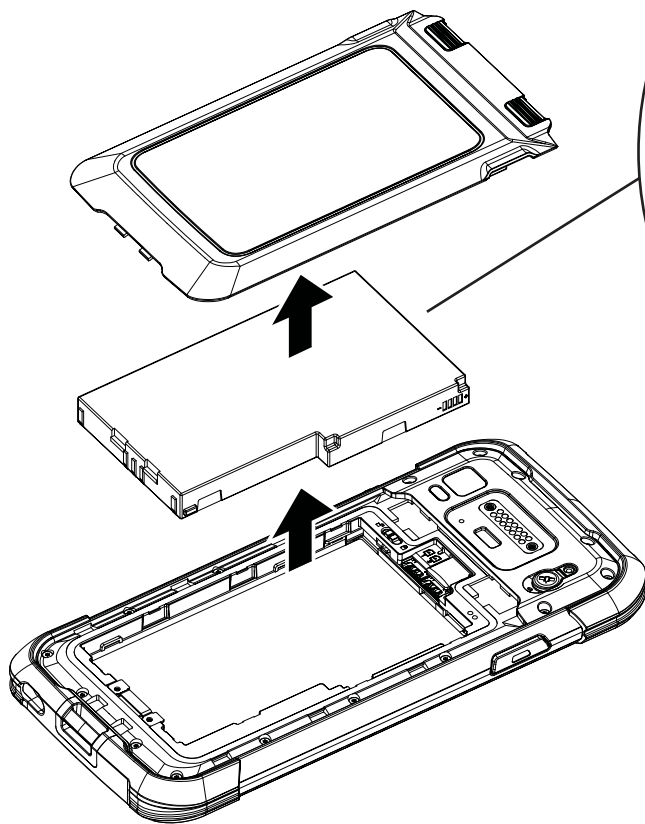

⑧ REMOVE BATTERY

To remove the battery

3. Detach the battery cover
4. Push the battery lock to the open position
5. Remove the battery

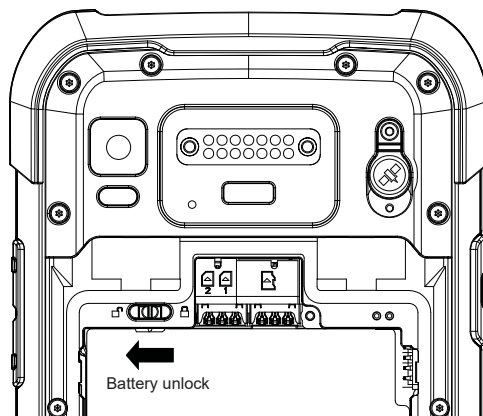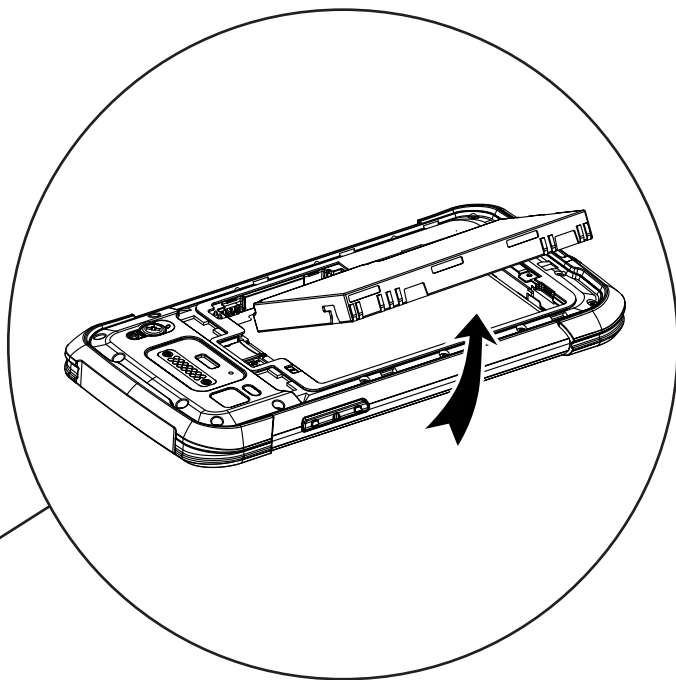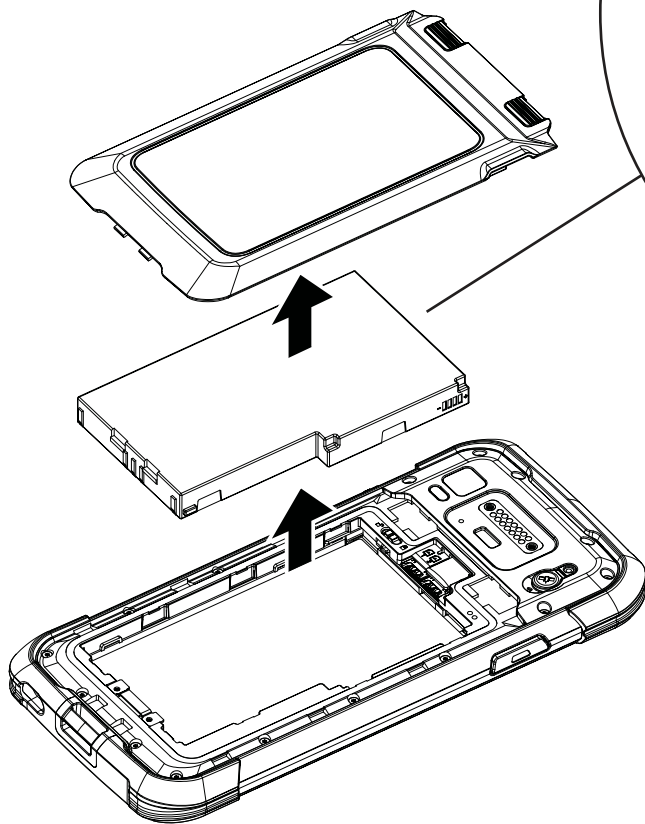

Please go to www.handheldgroup.com/knowledgebase to download more information.

Google, Android and Google Play are trademarks of Google LLC.

Version 1.0

handheld
www.handheldgroup.com